

**MODEL** 

R5000L or R5000P (NZ & AU)

## INSTALLATION SPECIFICATION SHEET


These instructions must be used in conjunction with the 'General Installation Instructions' for Masport wood fires.

## **CLEARANCE REQUIREMENTS**

This fire has been tested and complies to the Australian/New Zealand Standard AS/NZS 2918:2001 and all installations must be in accordance with the minimum clearances to combustibles indicated in these instructions.

The minimum clearances to combustables may be reduced if the combustable walls are shielded with an approved non-combustable material. Details of suitable materials and appropriate clearance reduction factors are present in Section 3 of AS/NZS 2918:2001.

#### POSITIONING YOUR FREE-STANDING WOODFIRE

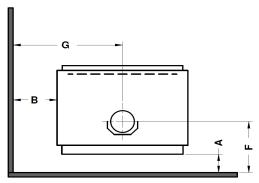

PARALLEL INSTALLATION

CORNER INSTALLATION

#### **NEW ZEALAND**

MINIMUM DISTANCES TO HEAT SENSITIVE WALLS (mm)

MODEL	FLUE SYSTEM & FLUE SHIELD	A	В	Е	F	G	Н	R§
R5000L/R5000P (SW) (Dry / Wet / Fan)	MASPORT FLUE + MASPORT DOUBLE SKIN SHIELD + TOP FLUE DIVERTER PLATE	128	200	85	324	550	441	624

#### **AUSTRALIA**

MINIMUM DISTANCES TO HEAT SENSITIVE WALLS (mm)

MODEL	FLUE SYSTEM & FLUE SHIELD	Α	В	Е	F	G	Н	R§
	FLOMET UNIVERSAL FLUE SYSTEM	188	280	150	384	630	506	716
R5000L/R5000P (HW)	FLOMET FLUE + MASPORT DOUBLE SKIN SHIELD + TOP DIVERTER PLATE	124	280	120	320	630	476	674
(Dry / Fan)	AIR-GROUP SPECIAL INSULATED FLUE KIT WITH TOP DIVERTER PLATE *	125	395	155	321	745	511	723

<sup>§</sup> Valid only when the room walls are at  $90^{\circ}$  to each other.

PRT. NO. 583268


DATE: 30.10.2012

<sup>‡</sup> Note: Clearances are for fire hazard only. For durability of finishes or surfaces you should contact the relevant manufacturer for their specification. Masport accepts no responsibility for the deterioration of surfaces or finishes.

<sup>\*</sup> Air-Group Special Insulated Flue Kit is same as AHD Special Insulated Flue Kit

# FLOOR PROTECTOR (Hearth) REQUIREMENTS PARALLEL INSTALLATION

MINIMUM FLOOR PROTECTOR DIMENSIONS IN mm

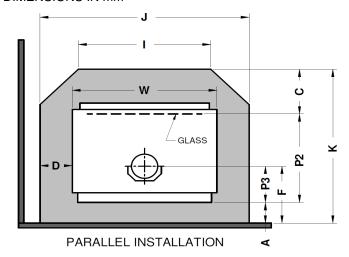

# DIMENSIONS IN THE TABLE ARE VALID ONLY WHEN THE FIRE IS EXACTLY AT ITS MINIMUM ALLOWABLE WALL CLEARANCE.

### **NEW ZEALAND**

MODEL	Flue Shield	Floor Protector height	<b>A</b> #	C#	D	F	-	J	K#	P2	Р3	W	Floor Protector Type Ø
DEGGGL /DEGGGD	LDS	ANY	128	300	100	324	522	900	968	540	196	700	AFP
R5000L/R5000P (SW)													
(Dry / Wet / Fan)													
(51) / 110(/ 1 (11))													

LDS = MASPORT / LOGAIRE DOUBLE SKIN SHIELD 1200mm HIGH + TOP DIVERTER PLATE

AFP = ASH FLOOR PROTECTOR

### **AUSTRALIA -** ALL WITH FLUE HEATSHIELD

MODEL	Flue Shield	Floor Protector height	<b>A</b> #	C#	D	F	-	J	K#	P2	P3	W	Floor Protector Type Ø
DECOOL /DECOOD													
R5000L/R5000P (HW)	FUF	ANY	188	300	100	384	600	900	1028	540	196	700	AFP
(Dry / Fan)	FUL	ANY	124	300	100	320	600	900	964	540	196	700	AFP
(=:, ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ;	AGA	ANY	125	300	100	321	600	900	965	540	196	700	AFP

FUF = FLOMET UNIVERSAL FLUE SYSTEM

FUL = FLOMET UNIVERSAL FLUE + MASPORT DOUBLE FLUE SHIELD + TOP DIVERTER PLATE

AGA = AIR GROUP / AHD SPECIAL INSULATED FLUE KIT + 900mm S/S REFLECTOR SHIELD + TOP DIVERTER PLATE

AFP = ASH FLOOR PROTECTOR


Ø for minimum constructional requirements see general installation instructions.

# Valid only when the fire is exactly at its minimum allowable wall clearance.

NOTE: Where a fan is being fitted, you may prefer to increase the 'A' dimension to 100 mm to provide easier access for servicing. If so, the amount you add to 'A' to bring it to 100 mm must also be added to the 'C' and 'S' dimensions.

# FLOOR PROTECTORS (Hearth) REQUIREMENTS CORNER INSTALLATION

MINIMUM FLOOR PROTECTOR DIMENSIONS IN mm

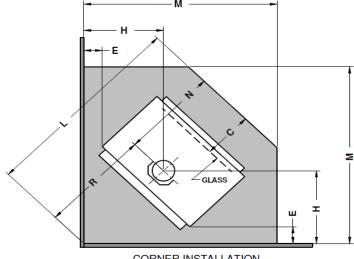

CORNER INSTALLATION

# DIMENSIONS IN THE TABLE ARE VALID ONLY WHEN THE FIRE IS EXACTLY AT ITS MINIMUM ALLOWABLE WALL CLEARANCE.

# **NEW ZEALAND**

MODEL	Flue Shield	Floor Protector Distance above Floor	С	E	Н#	L#	М#	N	R#	FLOOR PROTECTOR TYPE
DECOOL /DECOOD	LDS	ANY	300	85	44	1268	1109	644	624	ASH
R5000L/R5000P (SW)										
(Dry / Wet / Fan)										
(=1) / 1100/ 1001)										

LDS = MASPORT / LOGAIRE DOUBLE SKIN SHIELD 1200mm HIGH + TOP DIVERTER PLATE

AFP = ASH FLOOR PROTECTOR

# **AUSTRALIA**

MODEL	Flue Shield	Floor Protector Distance above Floor	С	E	Н#	L#	М#	N	R#	FLOOR PROTECTOR TYPE
R5000L/R5000P		ANIX	000	450	500	4000	1171	244	7.10	1011
(HW)	FUF	ANY	300	150	506	1360	1174	644	716	ASH
(Dry / Fan)	FUL	ANY	300	120	476	1318	1144	644	674	ASH
(= : ) / : 3)	AGA	ANY	300	155	511	1367	1179	644	723	ASH


FUF = FLOMET UNIVERSAL FLUE SYSTEM

FUL = FLOMET UNIVERSAL FLUE+MASPORT DOUBLE FLUE SHIELD+TOP DIVERTER PLATE

AGA = AIR GROUP / AHD SPECIAL INSULATED FLUE KIT + 900mm S/S REFLECTOR SHIELD WITH TOP DIVERTER PLATE

AFP = ASH FLOOR PROTECTOR

# FREE STANDING FIRE DIMENSIONS

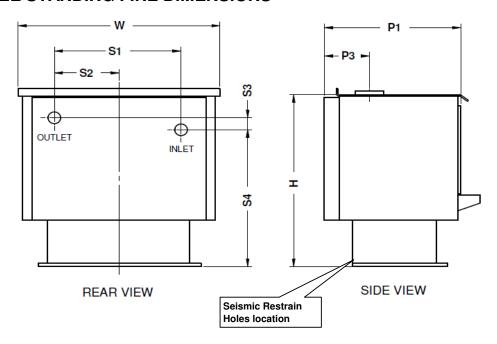

MODEL	P1	P3	Н	W	S1	S2	S3	S4
R5000L or R5000P (NZ & AU)	576	196	720	700	340	170	20	587

<u>Seismic Restrain</u> - In New Zealand and some part of Australia, it is required that the wood fire and floor protector are secured to prevent shifting in the event of an earthquake. This is best done by fastening the wood fire right through the protector to the floor, using two screws not less than 12 guage or the equivalent size of coach bolts or toggle fasteners.

THIS FLUE INSTALLATION DIAGRAM BELOW IS VALID FOR <u>NZ INSTALLATIONS</u> ONLY. FOR INSTALLATIONS IN AU PLEASE REFER TO SPECIFIC FLUE INSTALLATION SPECIFICATIONS SUPPLIED BY FLUE MANUFACTURER.

