



Corner Installation Clearances from Combustibles


A =  
B =

Standard Installation Clearances from Combustibles

C =  
D =  
E =

## Hearth Dimensions

Minimum Square Hearth

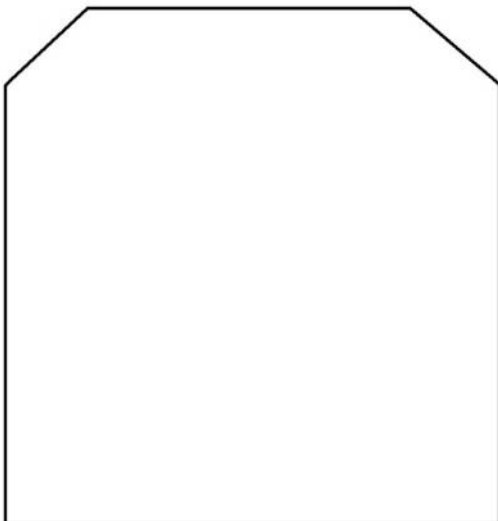

Minimum Corner Hearth

