



Corner Installation Clearances from Combustibles

A =

B =

Standard Installation Clearances from Combustibles


C =

D =

E =

## Hearth Dimensions

Minimum Square Hearth

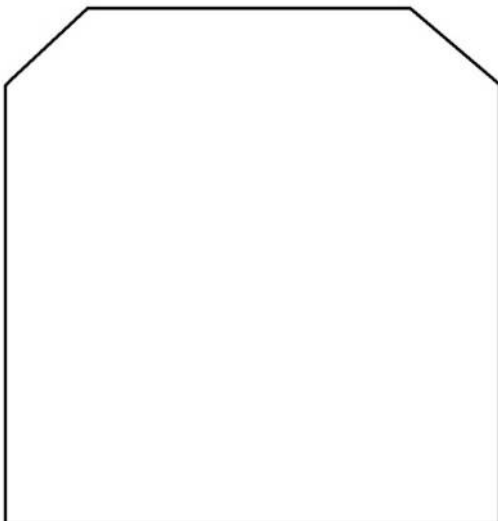

Minimum Corner Hearth

