

Corner Installation Clearances from Combustibles


A =
B =

Standard Installation Clearances from Combustibles

C =
D =
E =

Hearth Dimensions

Minimum Square Hearth

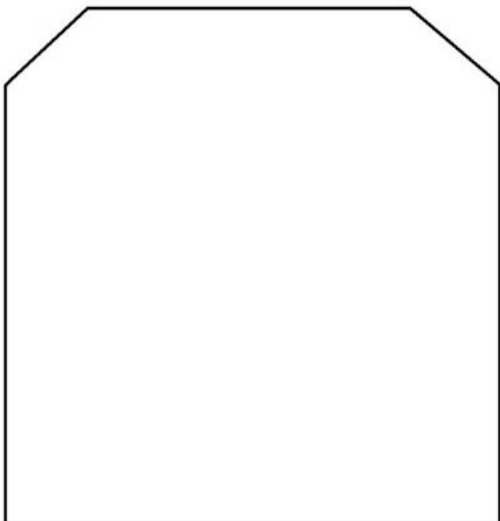

Minimum Corner Hearth

