

QUALITY HOT WATER SERVICE

INSTALLATION AND OWNERS MANUAL

WARNING

This water heater should be installed in accordance with the requirements of AS 3500.4.

The owner should also be aware of any limitation on the suitability of the water heater for use with water of specified poor quality, and any need for water softening treatment as per AS 3500.4.

Wise Living Products a division of Albury Consolidated Industries Pty Ltd Incorporating Solar~Mio, Thermalux and Metal Dynamics

WARNING: *Hot Water Storage Tank should be installed by a licensed trades person.

*The installation may require the addition of a tempering valve.

*Where a drip tray is supplied and fitted, ensure the tank is separated from the tray by timber slats to prevent electrolysis and insure that the tray will drain.

WARRANTY:

The tank is covered by a minimum 5 year warranty. The electric element, thermostat are warranted for one year.

(Please see instruction manual for any additional warranty details.)

WARNING


HEATING CIRCUIT MAY CONTAIN SYSTEM CONDITIONERS RUST OR ANTI FREEZE INHIBITORS WHICH COULD BE INJURIOUS TO HEALTH.

SERVICING IS TO BE CARRIED OUT BY AUTHORIZED AGENT.
COLLECT FLUID FOR APPROPRIATE DISPOSAL.

- *"Platinum Series" is supplied with a 700kPa/99C Pressure Temperature Relief Valve
- *Expansion Control Valves may be required in some areas. Check with local authority or licensed installer.
- *Mains water pressure must not exceed 500kPa, The hot water heater must be fitted with an approved 500kPa pressure limiting valve. Failure to do so will void warranty

WISE LIVING CENTRA-COIL MAINS PRESSURE HOT WATER SERVICE



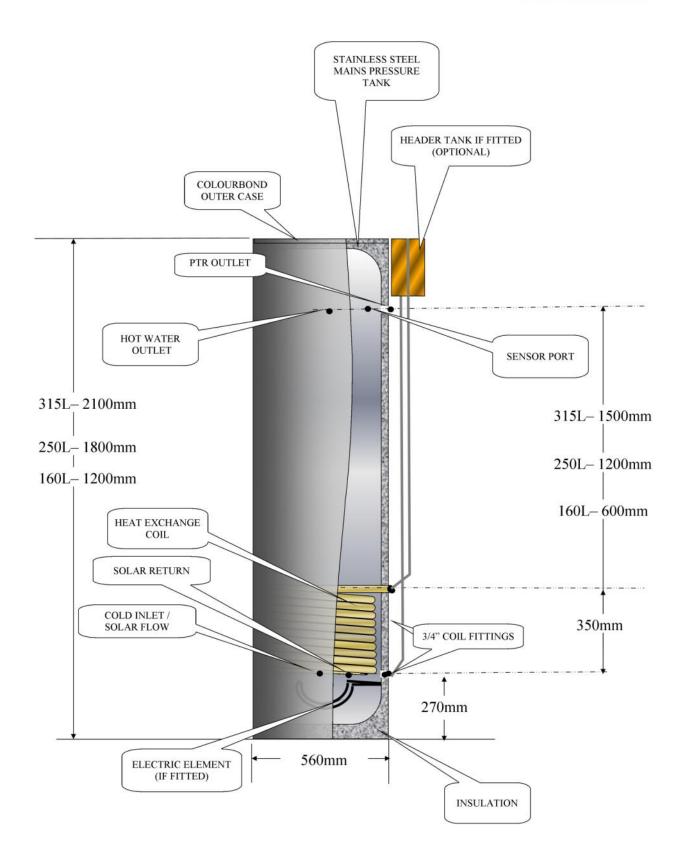

Congratulations on choosing a As hot water leaves the storage "Wise Living "PLATINUM SERIES" hot water service. The unit has been manufactured to Australian Standards AS3498 - AS1056 and incorporates an all Stainless steel cylinder.

"Platinum" electric water heater

The "Platinum Series" is Stainless steel hot water service which are renowned for their In accordance with A.S.3500.4, it longevity and will provide hot is water for many years, The standard tank is an electric storage water heater that can be heated using standard or "off bathroom, ensuites and personal peak" electricity. Your electricity supply provider can furnish you with information in relation to the "off peak" tariff applicable to your particular location.

The "Platinum" hot water service heats potable water in the storage cylinder by one or more immersion elements (depending on model). thermostatically controlled electric element in the bottom of the cylinder can be connected to normal or "off peak" power supply. A second optional booster element in the top of the cylinder (in twin element models) is used to heat additional hot water as required. The heated water rises up the cylinder by natural convection to the top where it is ready for use

cylinder, it is replaced by cold water, which enters at the bottom of the cylinder by means of a 500kPa Pressure Limiting Valve. Wise Living recommends flushing the hot water tank at intervals as advised by your local licensed plumber.

Hot Water Safety

recommended that where required a temperature control device or mixing valve be fitted between the water heater and hygiene areas to reduce the risk of scalding. This is achieved by controlling water temperature to below 50°C.

PTR Valve

The "Platinum" hot water service is supplied with a 700kPa PTR **Temperature** (Pressure Relief It is recommend you Valve) operate the relief lever of the PTR valve once every 6 months. It is important you raise and lower the lever gently

The PTR valve is designed to allow small quantities of hot water to discharge during heating allow for hot water expansion.

PAGE 2 E&OE

Should a continuous discharge occur, we recommend that you The "Platinum Series" Hot water pressure.

Mains Water Supply

500kPa an the pressure exceeds must be fitted.

warranty.

An approved Duo Valve (isolating / poor water supply non return Valve), expansion warranty. control valve (and where advised Please check with your installer or water supply main and the cold conditioning filter water inlet of the "Platinum Series" necessary. tank.

Water connection should be as The "Platinum Series" should be shown in diagram FIG 1.

It is recommended that hot water accordance with your licensed outlet pipes are fully insulated, especially for external units, and that the hot water outlet pipe is slightly curved or stepped down adjacent to the water heater outlet service to the element, thermostat, to provide a positive heat trap and PTR valve and fittings. avoid thermal siphoning from the that the specification label water heater.

Poor Water Areas

consult your licensed plumber as heater is a Stainless Steel Cylinder this may indicate a defective PTR which does not require a sacrificial defective thermostat, or anode. The "Platinum Series" hot abnormal high mains water water heater will provide many years of life in most instances if connected to reticulated water The water inlet pressure must not supply. (Which is found in most exceed 500kPa. If mains water metropolitan areas.) Connecting hot water heater approved pressure reduction valve supply other than a reticulated water supply such as Bore or Failure to fit device will VOID Spring water is not recommended.

> Connecting Hot water system to may void

or necessary a line strainer and/or local water authority if you are water conditioning filter) are connecting to a alternative water recommended between the cold supply. A water treatment or water mav be

Installation

located and installed plumbers recommendation, usually in an area so as to minimise Please pipe runs. adequate ensure Installation must comply visible. with A.S.3500.4 and any local authority regulations.

PAGE 3 E&OE

Combustible Material It is recommended not to place combustible material on or adjacent to the water heater.

Internal Installation Safe Tray

For internal (indoor, roof) installations, a safe or drip tray is recommended in accordance with A.S. 3500.4 clause 4.5.3.

External Installation

The unit should be placed on a stand, plinth or concrete base as recommended in accordance with A.S.3500.4 Clause 4.5.3.

Electrical Connection

"Platinum Series" water designed for heater is 240V.A.C supply only. phase A.S.3000—(Wiring Code) and local supply authority regulations apply.

Connection for either single or

twin element water heaters is made at the terminal location points under the element covers. Note: Wiring entry to the to the bottom element cover. Always install a standard 20mm conduit elbow to the port to ensure conduit support.

The "Platinum Series" heater is supplied with an electric freeze liquids in solar systems thermostat. Under circumstances should the water These are labeled with a 'Coil' heater be operated without the symbol. thermostat being in circuit.

Replacement should only be undertaken qualified by а electrician.

. Solar connections

For the correct connection of solar hot water collectors, refer to Diagrams and FIG 7,8,9 additional installation instructions supplied with the solar hot water collector.

Solar connections 20mm are (3/4") female B.S.P. fittings. Cold flow from Solar is taken from the Mains water inlet by means of a "3-Way" Valve. It is labeled "Solar Flow" and has a 'Sun' symbol with the word "Solar"

The "Solar Hot return" is labeled single "Solar Return" and has a 'Sun' symbol with the word 'Solar'. refer to Diagrams 1 & 2 and to additional installation Solar instructions supplied with the solar hot water collector.*

Platinum Series Centra-Coil

The Platinum Series Centra-Coil uses a lower fixed coil to enable connection point is made through the connection of boilers & central the standard conduit port adjacent heating systems. These systems may require a header expansion tank and the addition of water conditioner to prevent scale and rusting, or to enable the use water of "Frost-Tec" or equivalent anti no installed in high frost areas.

> PAGE 4 E&OE

Hydronic Connection

For the correct connection of boilers & central heating systems, consult with system designer.

For basic installation Diagrams refer to FIG 2, 3, 4, 5 & 6.

Filling

Fill the water heater by opening all hot water taps and opening the cold water inlet to allow the water heater to fill and air in the system to be expelled. Close each hot 1. water tap, as the flow becomes free of air. Check all piping for leaks.

Power should not be turned on until the water heater is completely filled with water.

Flushing and Draining

To flush or drain the "Platinum Series" water heater, power must be turned off and then turn off the cold water supply to the water 3. heater. The lever on the PTR valve should be opened but care should be taken so the lever does not snap back as it could damage the valve seat.

If the tank is fitted with a drain 4. cock this allows for easy draining and for periodic flushing of the 5. water heater without piping disconnections at unions, and without the need for re-checking for leaks after reconnection.

If no drain cock is fitted, the union at the cold water inlet, should be undone slowly. Ensure safe tray drain is connected and in operational condition.

After draining repeat initial filling procedure to refill.

WARNING: The heater may contain extremely hot water. Exercise caution to prevent scalding.

Warranty Conditions

- The system must be installed by a licensed plumber and/or electrician in accordance with these installation instructions; and all relevant statutory and local requirements of the State in which the system is installed.
- The "Platinum Series" water heater must be operated and maintained in accordance with the instructions supplied.
- This warranty only applies to the water heater product and does not apply to any additional electrical and/or plumbing parts supplied by the installer.
- 4. The system is installed in a domestic household.
 - installed in a regional location where regular flushing is required due to sediment build-up, then a drain cock for flushing must be fitted at the time of installation. If in doubt consult your plumber.

PAGE 5 E&OE

6. The system is covered for the indicated period from the date of 5. the original purchase. Should a part of the complete water heater component be replaced during this period, only the balance of the original warranty will continue to 6. remain effective.

Warranty Exclusions

The following warranty exclusions may cause the system warranty to become void. This may incur a 7. service charge and cost for parts should they become necessary.

- Where service is required to reconnect the water heater operation due to problems related with abnormal water supply (i.e. high water pressure), faulty plumbing and/or electrical wiring, or major variations in electrical energy supply.
- 2. Where the system fails due to misuse, accidental damage, flood, acts of God, incorrect installation or unlicensed service repair work attempts.
- Where system service is required due to the nonconformance with this warranty's recommended maintenance in certain water quality conditions.
- Claims for damage to walls foundations (outside), furnishings (inside), roofs or other losses, directly or indirectly due to leakage from

the water heater.

- Damage or breakage is not covered by this warranty, and should be added separately to your general household insurance policy.
- the effects of sludge/sediment as a result of connection to a water supply from unfiltered sources i.e. spring, dam, bore, river or other.
- Where water stored in the cylinder exceeds the following levels:

Total dissolved solids:

600 mg / litre or p.p.m Total hardness:

300 mg / litre or p.p.m Chloride:

300 mg / litre or p.p.m Magnesium :

10 mg / litre or p.p.m Sodium:

150 mg / litre or p.p.m

:Hq

Min 6.5 and Max 8.5

PAGE 6 E&OE

CENTRA-COIL CONNECTED TO COMBUSTION STOVE PLEASE CONSULT WITH SYSTEM DESIGNER FOR SPECIFIC INSTALLATION REQUIRMENTS


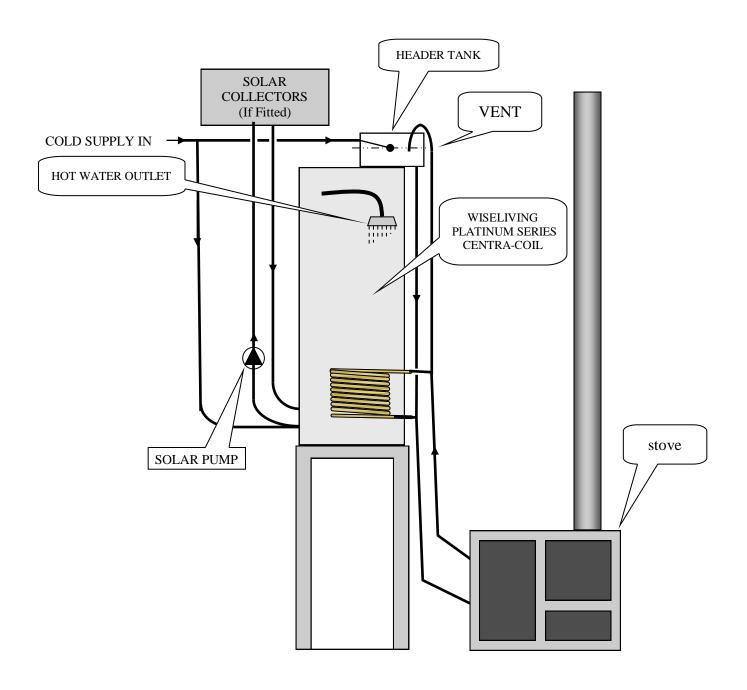


FIG 2.

CENTRA-COIL HYDRONIC INSTALLATION WITH WOOD BOILER PLEASE CONSULT WITH SYSTEM DESIGNER FOR SPECIFIC INSTALLATION REQUIRMENTS

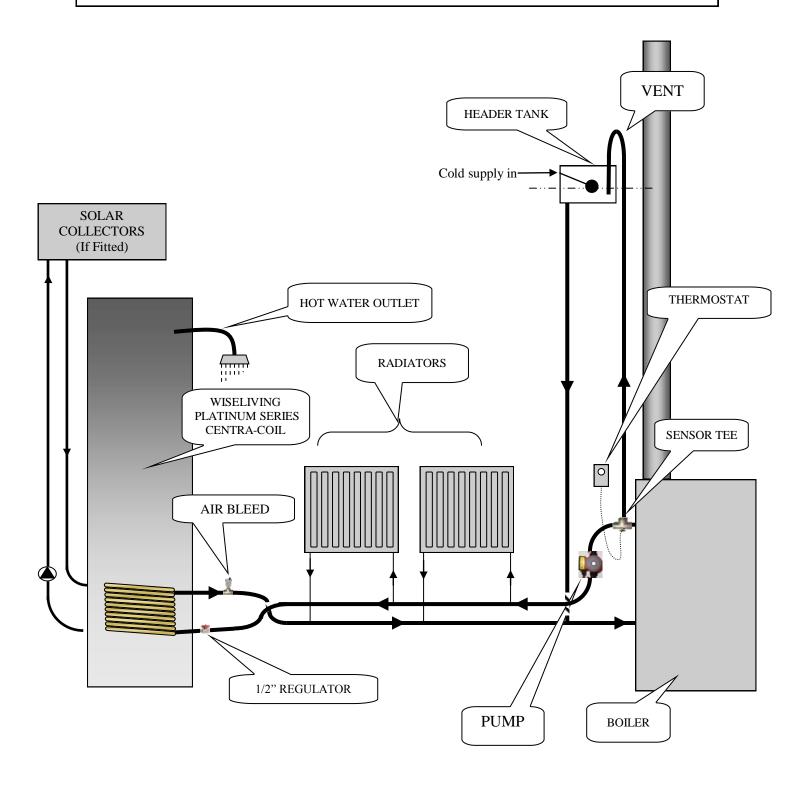


PLEASE CONSULT WITH SYSTEM DESIGNER FOR SPECIFIC INSTALLATION REQUIRMENTS

FIG 3.

CENTRA-COIL INSTALLATION BELOW LEVEL OR LEVEL WITH WOOD BOILER

PLEASE CONSULT WITH SYSTEM DESIGNER FOR SPECIFIC INSTALLATION REQUIRMENTS

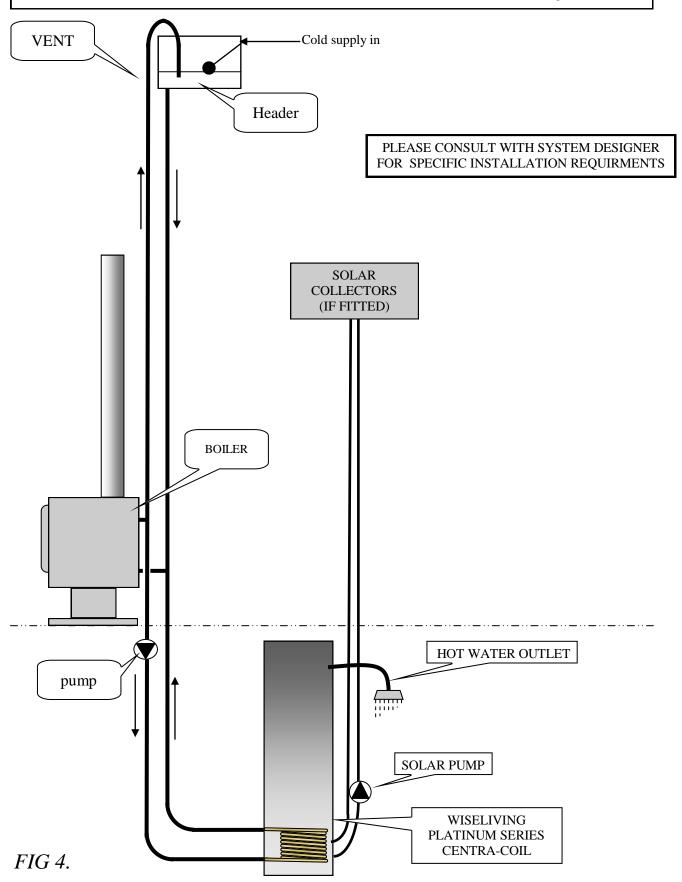

CENTRA-COIL HYDRONIC INSTALLATION WITH GAS BOILER

(ELIMINATES NEED FOR COMBINATION BOILER)

PLEASE CONSULT WITH SYSTEM DESIGNER FOR SPECIFIC INSTALLATION REQUIRMENTS

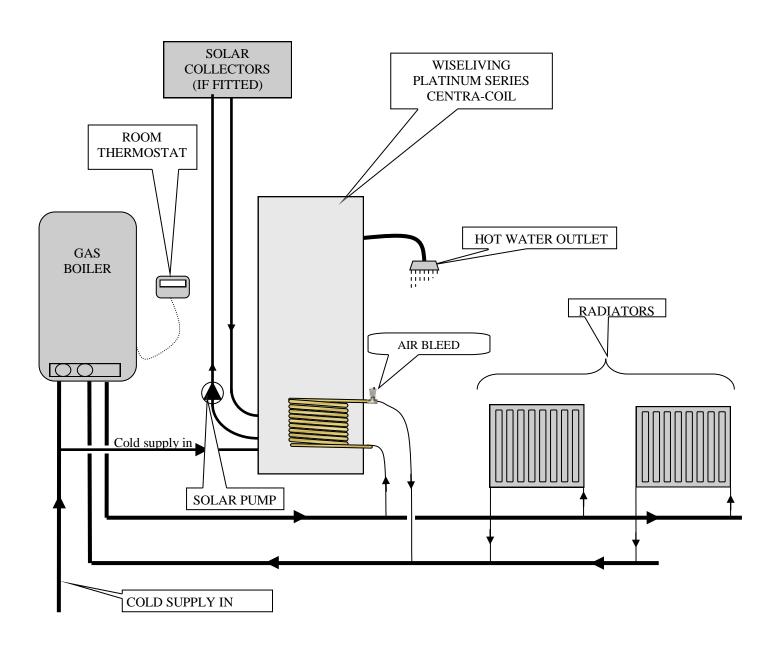


FIG 5.

CENTRA- COIL HOT WATER BOOSTED BY GAS HYDRONICS VIA DIVERSION VALVE

(ELIMINATES NEED FOR COMBINATION BOILER)
PLEASE CONSULT WITH SYSTEM DESIGNER FOR SPECIFIC INSTALLATION REQUIRMENTS



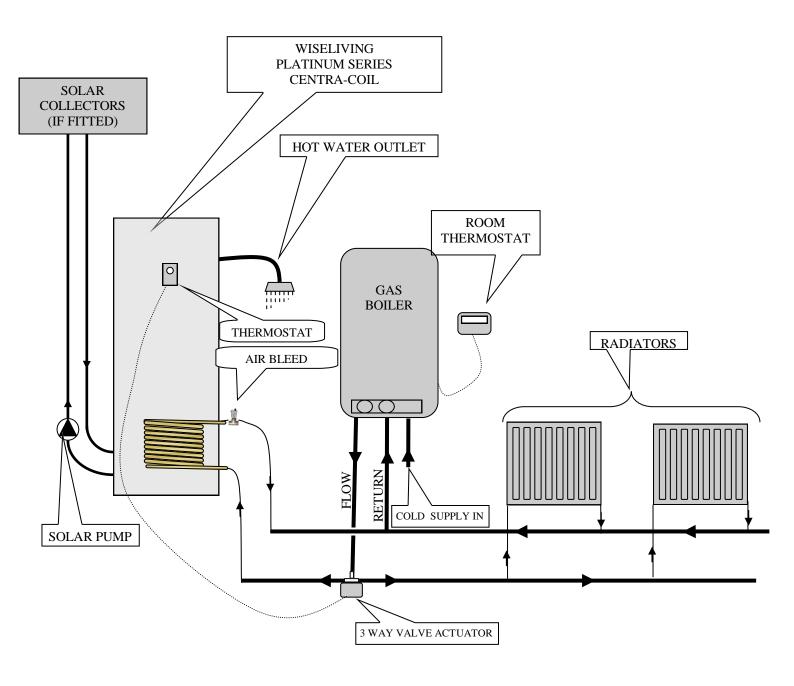


FIG 6.


SOLAR INSTALLATION USING DIRECT CONNECTION TO SOLAR OUTLETS PLEASE REFER TO ADDITIONAL SOLAR INSTUCTION MANUAL FOR SPECIFIC INSTALLATION REQUIRMENTS

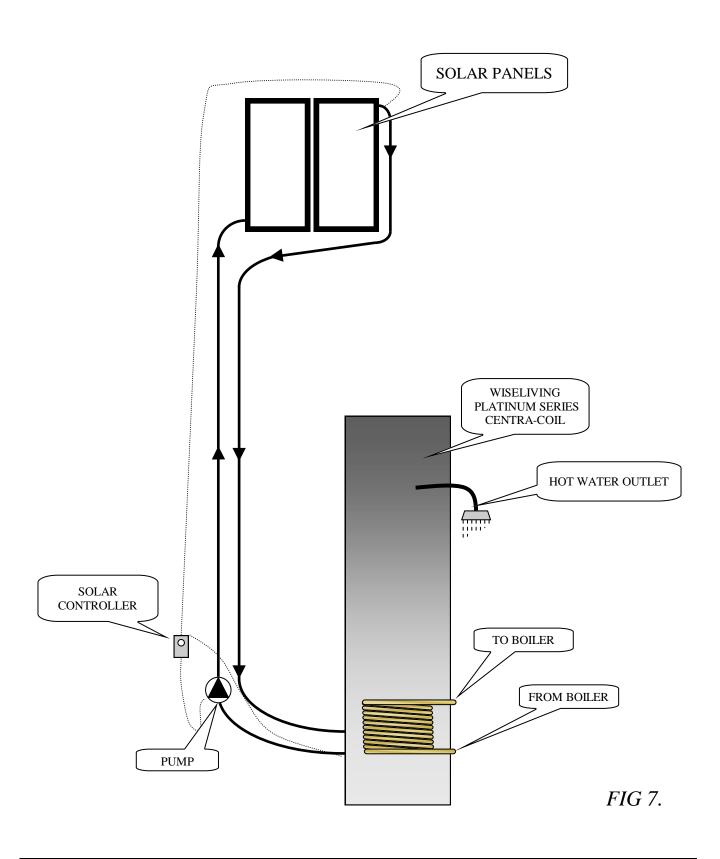

CENTRA-COIL "DRAIN DOWN" SOLAR INSTALLATION PLEASE REFER TO ADDITIONAL SOLAR INSTUCTION MANUAL FOR SPECIFIC INSTALLATION REQUIRMENTS

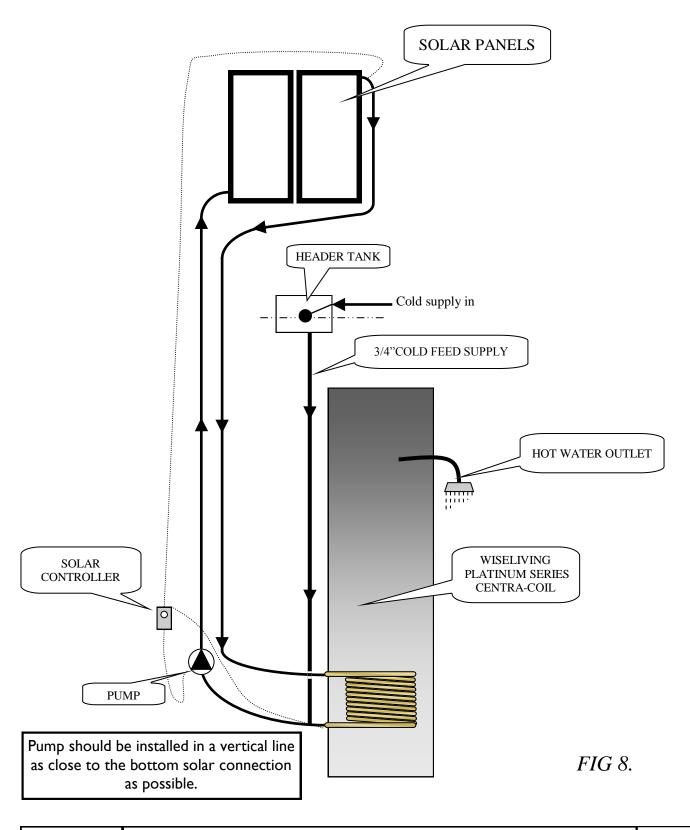

CENTRA-COIL "FROST-TEC" SOLAR INSTALLATION PLEASE REFER TO ADDITIONAL SOLAR INSTUCTION MANUAL FOR SPECIFIC INSTALLATION REQUIRMENTS

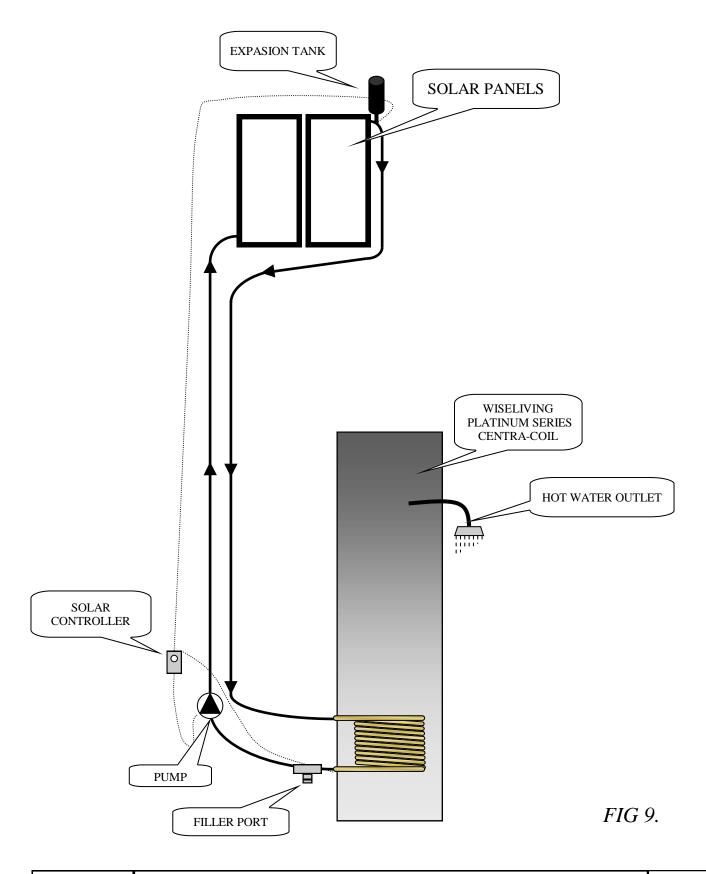



WARNING

- 1. Do not operate without the thermostat and non resetting thermal cut out in circuit.
- 2. The combination pressure and temperature relief valve should be opened six (6) monthly and replaced not exceeding 5 years or more frequently in areas where there is high incidence of water deposits. If the PTR valve does not discharge water freely when the easing lever is opened, the valve should be checked by qualified service person or plumber.

Note: The hot water heater MUST be fitted with a approved 500kpa pressure limiting valve to the cold water inlet. Failure to fit devices will void warranty.

- 3. The pressure relief valve and associated drain outlet pipe must not be sealed or blocked.
- 4. Warranty may be void if connected to Bore or Spring water. Hot water heater for use with reticulated water supply.
- 5. The Appliance is not intended for use by young children or infirm persons without supervision.
- 6. Young children should be supervised to ensure that they do not play with the appliance.

OPERATING AND INSTALLATION INSTRUCTIONS

WATER HEATER MAY ONLY BE INSTALLED BY AUTHORISED TRADES PERSON A supply disconnection device with air gap separation is required in the fixed wiring. **DANGER: The operation of the thermal cut-out indicates a possible dangerous situation. DO NOT reset the thermal cut-out until the water heater has been serviced by a qualified person.**

The water heater may drip small qualities of water from the PTR valve - this is normal during normal operation.

The PTR valve is to be operated regularly to remove any deposits and verify it is not blocked

The water heater is supplied with a 700kpa pressure and temperature relief valve (PTR) The water heater is manufactured with a PTR connection Labelled "PTR". PTR Valve should be fitted to this connection. When PTR is fitted, a discharge pipe must be fitted in a continuous downwards direction ensuring protection from frost free ambient temperature.

A pressure limiting valve is required to be fitted on the incoming cold water supply. Failure to fit this device **will void** warranty.

DANGER: Failure to operate the relief valve at least once every six (6) months may result in the water heater exploding. Continuous leaking from valve may indicate a problem with water heater. Call a qualified service person.

PAGE 15 E&OE



PLEASE NOTE:


All systems and heaters have been designed and tested to provide trouble free hot water for many years providing they are installed correctly.

Most problems relating to the functioning of the solar / hydronic system and hot water heater are related to incorrect installation.

As the manufacturer we have no control over installation and therefore cannot take any responsibility for incorrect installations. Warranties only extend to faulty product and do not cover the installation.

We at Wise Living Products are happy to work with your licensed plumber to overcome installation problems that may arise.

WIRING SCHEMATIC

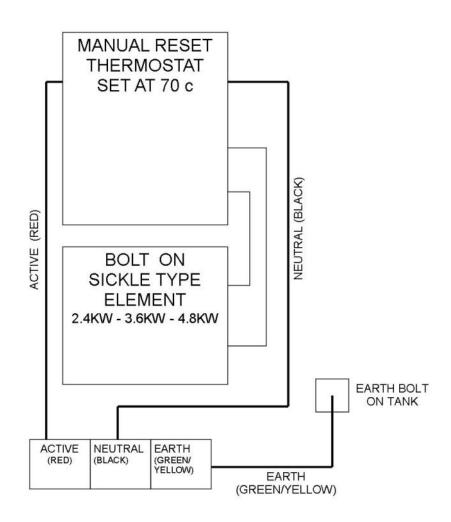

PAGE 16 E&OE

Warranty Registration Form—P-R

Owners Name:				
Installation Address:				
Town: State: PC:				
Phone Number ()				
Date Purchased://				
Installation Date://				
I I Serial Number:				
I I Installed By				
Plumber:				
License Number:				
Phone Number ()				
Electrician:				
License Number:				
Phone Number ()				
I I I Please retain a copy of this information I (Area supplied on previous page) I				
Post this form to: Wise Living Products PO Box 565 ALBURY NSW 2640				

ALBURY NSW 2640
Ph: 02 6040 6666 Fax: 02 6040 6667
Email: info@wiseliving.com.au



Place Stamp Here

PO BOX 565 ALBURY NSW 2640

S	Owners Name:	<u> </u>	
DS.	Installation Address:		
SCOR SARD	Town:	State:	PC:
R RETY C	Date Purchased://	Installation Date:	/ /
YOU KRAN	Serial Number:		
FOR	Installed By		
RETAIN THIS INFORMATION FOR YOUR RECORDS. RECORD THE DATE THAT THE WARRANTY CARD WA POSTED: // // // // // // // // // // // // //	Plumber:		
EMAT THAT	License Number:		
TE T	Address:		
HIS II IE DA IED:	Ph Number:		
IN THIS D THE D POSTED	Electrician:		
COR	License Number:		
RE			

WARRANTY

Wise Living Products warrants their hot water storage tanks to be free from defects in materials and workmanship and under normal use and service in accordance with the attached installation and operating instructions and within 5 years from the date of original purchase on the terms herein shall repair or replace without cost to the original customer any part thereof which shall be returned to our factory or designated agent, transportation charges prepaid and which our inspection shows to be thus defective.

This warranty does not apply to discolouration of the surface or tarnishing of fittings, all of which require normal service to maintain them.

Wise Living Products warrants the Electric Elements, Thermostats, and where supplied Pressure Temperature Relief Valves, Anti Reverse Circulation Valves, Pumps and Controllers, to be free from defects in materials and workmanship and under normal use and service in accordance with the attached installation and operating instructions and within 12 months from the date of original installation on the terms herein shall repair or replace without cost to the original customer any part thereof which shall be returned to our factory or designated agent, transportation charges prepaid and which our inspection shows to be thus defective. All valves, pumps and controllers require normal service to maintain them.

Under the terms of this warranty, Wise Living assumes no responsibility for the labour costs involved in removing or replacing the above items, nor shall Wise Living be liable for any injury, loss or damage (direct, indirect or consequential) arising out of the use or inability to use the product or its removal and replacement. All other Warranties expressed or implied are excluded to the extent possible at Law. Consumers also have rights under relevant State, Commonwealth and Federal Laws.

The retailers do not have authority to alter this warranty.

WISE LIVING

HYDRONIC HEATING



"Sophel"

Combination Boiler / Glass Front Heater Open Fire Place Insert "PURE HEATING PLEASURE"

Sophel

The Sophel range of hydronic heating boilers are true to the "wise living" philosophy of all Dynamic series boilers.

The Sophel combines the ambience of a super large glass front heater with the flickering flames of a real log fire and the wonderful even warmth that only wood fired hydronic heating can provide.

This combined with the cost savings gained through the burning of natural renewable fire wood - an important consideration with renewable energy playing such a vital role in today's world. It is worth noting that fire wood is also considered to be green house neutral.



"TUSCANY" GARDEN OVEN

THE "TUSCANY" HAS BEEN DESIGNED AND MANUFACTURED BY THE MAKERS OF "THERMALUX" COOKERS AND RANGES. AUSTRALIA'S FOREMOST COMBUSTION STOVE MANUFACTURER.

THE MANY YEARS OF SPECIALIZED KNOWLEDGE GAINED IN PRODUCING THE LARGEST RANGE OF COMBUSTION COOKERS AND BOILERS ON THE MARKET TODAY, HAS ENABLED METAL DYNAMICS TO PRODUCE AN ELEGANT GARDEN OVEN WHICH IS EXTREMELY VERSATILE.


METAL DYNAMICS ARE RENOWNED FOR THEIR WORLD CLASS COOKERS AND THE "TUSCANY" IS NO EXCEPTION. THE "TUSCANY" IS A HIGH OUALITY SUPER EFFICIENT GARDEN OVEN CAPABLE OF PROVIDING RESULTS WHICH ARE THE EQUAL OF THEIR MORE EXPENSIVE STABLE MATES.

A CLEVER SMOKE BYPASS CONTROL ALLOWS THE "TUSCANY" TO BE USED AS A 'CONVENTIONAL' OVEN, FOR COOKING DELICIOUS BREAD, BISCUITS, CAKES, PASTRY AND ROAST MEATS. THE "TUSCANY" CAN ALSO BE USED AS A 'SMOKING' OVEN, FOR SENSATIONAL PIZZA, SPECIAL BREADS, SMOKED FISH, MEATS AND SAVOURIES. YOU CAN LET YOUR IMAGINATION RUN WILD AND EXPERIMENT TO YOUR HEARTS DELIGHT. RELAX AROUND YOUR "TUSCANY" GARDEN OVEN. ENJOYING SENSATIONAL FOOD WITH FAMILY AND FRIENDS.



"LE DOLCE VITA" (THE GOOD LIFE)

THE "TUSCANY" IS SUPPLIED WITH ITS OWN PIZZA SHOVEL, FIREBOX RAKE, CHROME OVEN RACK AND COMPLIMENTARY HEAT BEADS AND FIRE LIGHTERS.

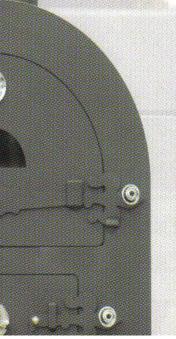

GARDEN OVEN DIMENSIONS: OVEN INTERNAL DIMENSIONS: TROLLEY - STAND DIMENSIONS: CABINET INTERNAL DIMENSIONS: RECOMMENDED FILLE SIZE: CLEARANCES TO COMBUSTABLES: REAR 150mm; SIDE 100mm

550mm W x 480mm D x 570mm H 400mm W x 470mm D x 320mm H 1480mm W x 480mm D x 900mm H 530mm W x 450mm D x 650mm H 150mm DIAMETER x 1800mm MIN LENGTH Solar-Mio Solar-Mio

The Wise Living Group Respect for People and the Environment

INCORPORATING
SOLAR MIO ~METAL DYNAMICS~THERMALUX
PO BOX 565 ALBURY NSW 2640
AUSTRALIA

www.wiseliving.com.au
PHONE (02)6040 6666 FAX (02)6040 6667

Solar Hot Water The Clever Solar System

